

CoolAnyard

Installation Instruction

Spring Ring Adapter

sales@coolanyard.com

1.877.547.2507



Some cameras have a lanyard connection port that makes it difficult to attach a spring ring. Usually there is an indentation with a cross member. CoolAnyard supplies an adapter that allows CoolAnyards to be attached to a spring ring.



Locate this cross member connection port and run the end of the ratchet tie through the underside of the connection port.

YOU WILL NEED A PAIR OF NEEDLE NOSE PLIERS LATER



Fold the ratchet tie over the top side of the connection port and toward the spring ring.



Feed the ratchet tie through the CoolAnyard Spring adapter tube all the way through the tube. It will travel to the outside of the spring ring end of the tube.



Pull the ratchet tie but leave it loose on the camera connection port (not too tight). Let it be able to flop around on the camera connection port.



If you have a very light camera you might clip the excess ratchet tie at the spring ring.

Note: If possible feed the ratchet tie through the spring ring and back inside and through the tube (use needle nose pliers to help). Pull it outside the tube (Camera side) (use needle nose pliers to help). Use patience as this makes strong connection.



Take cutters or scissors and clip excess ratchet tie. You now have a strong spring ring adapter connection installed. Simply attach your CoolAnyard to the spring ring.

Visit us <http://www.ab5c.com/ebay>